
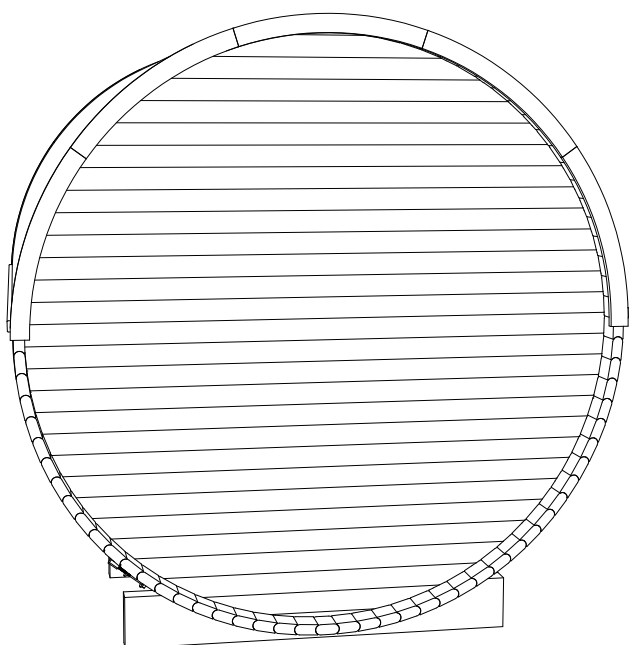
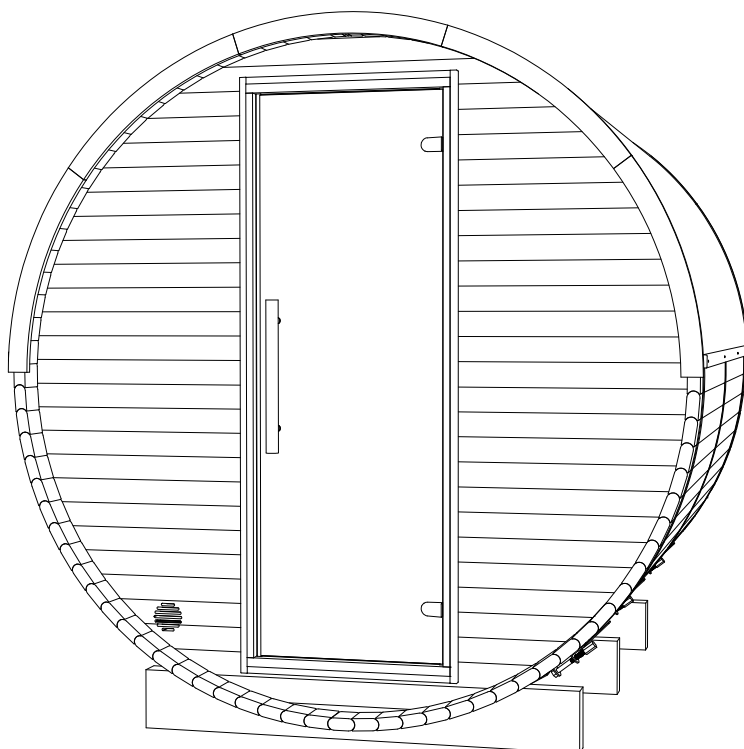


BARREL SAUNA

ASSEMBLY INSTRUCTIONS

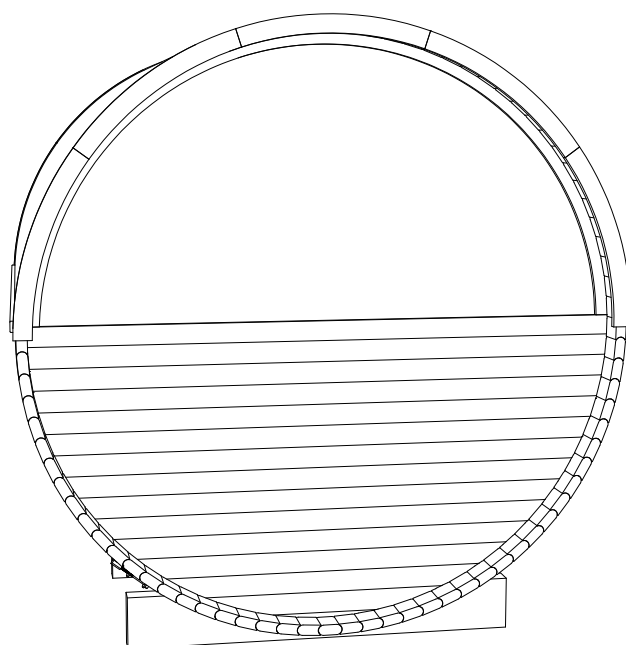

Model: R-190-225
R-190-260
R-229-225
R-229-260










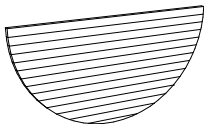
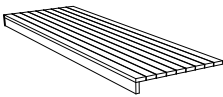
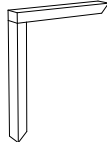

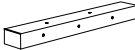





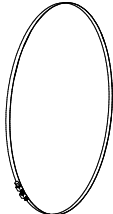
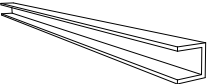








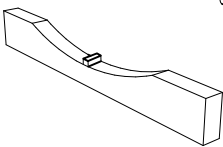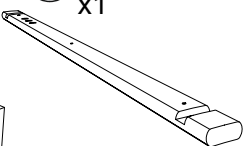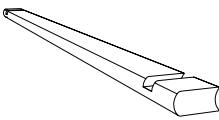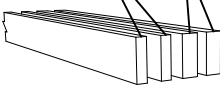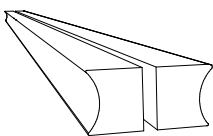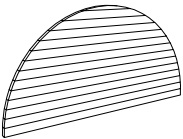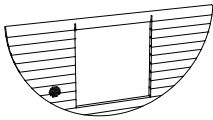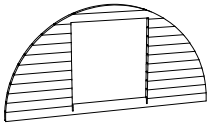

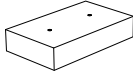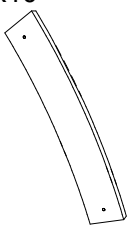
Model: RP-190-225
RP-190-260
RP-229-225
RP-229-260


Note: Please read the manual before construction

Rev. 26.09.2024.


PART LIST

A x3 	B x1 	C R190 x74 R225 x88 	H1 x4 10mm 15mm 	H x2 
cradle	center stave	body stave	different thickness filling peaces	final H tipe stave at the top
V3 x1 	F x1 	F1 x1 	F2 x1  x1 x1 x1	V x1 
upper rear panel	front panel bottom	front panel top	door and door moldings	bottom rear panel
J x2 	J1 x2 	J2 x2 	J3 x4 	N1 x2 
sauna bench	supporting leg	backrest	wall mount	door handle
L x2 	L1 x6 	W x10 	O x1 	I x3 
sauna floor	fixing block for sauna floor	decorative roof finishing board	roof board	metal band
D x3 	S1 R190 x45 R225 x50 	S10 R190 x135 R225 x160 	S5 R190 x25 R225 x50 	S4 x11 
Cable canal (for LED option)	screw 5.0x100 SS	screw 4.0x60	screw 4.0x50 SS	screw 5.0x120
S8 x15 	S6 x30 	S7 x35 	S2 R190 x25 	S14 x10 
Cable canal nails (for LED option)	screw 5.0x70 SS	screw 4.2x55 brown	screw 4.0x70 SS	screw 5.0x80

PART LIST

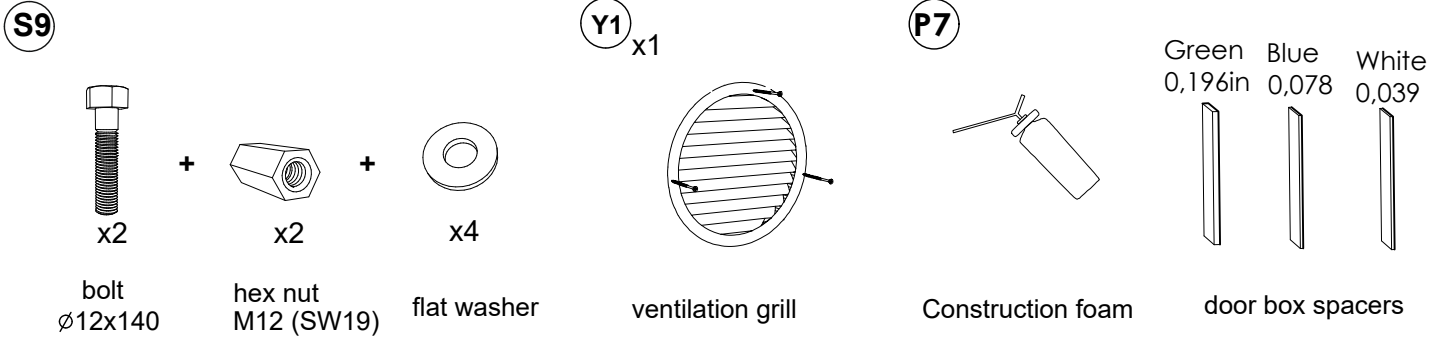

Barrel Dimensions

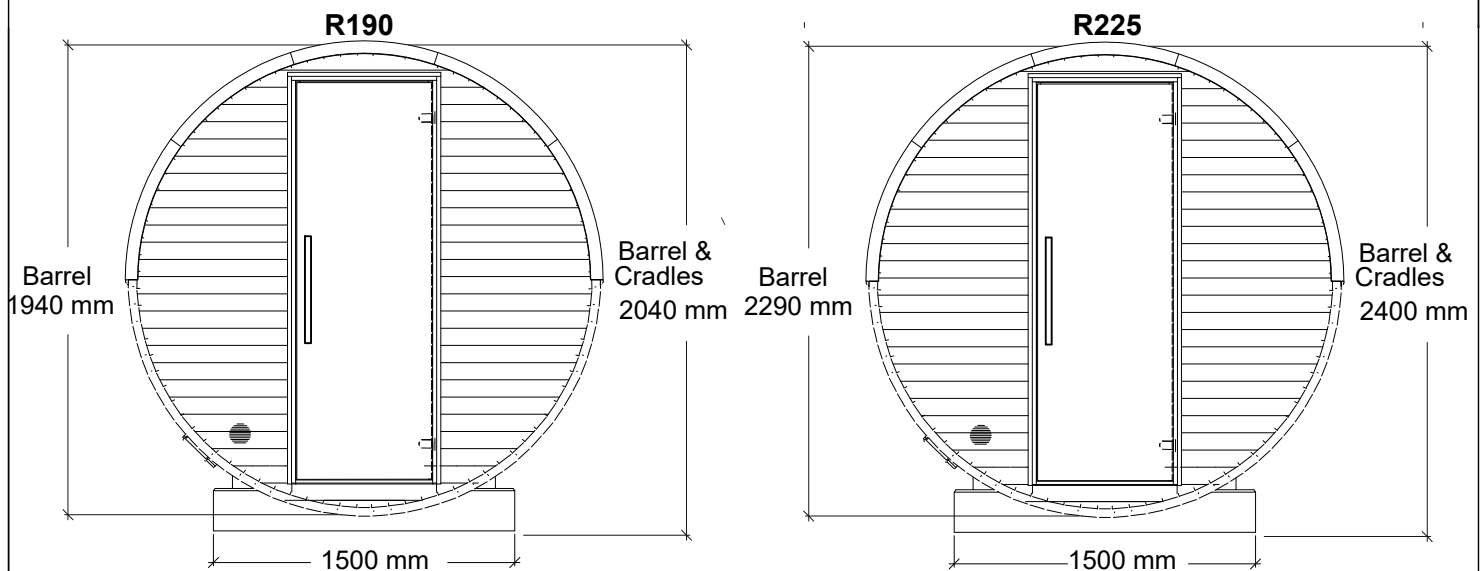

RECOMMENDATION



2 person recommended




Before you begin, be sure the sauna will fit in your chosen location.

Be sure the site is level and free of standing water after rainfall.

Concrete, pavers or crushed stone is preferred.


Check parts before construction.

TOOLS REQUIRED

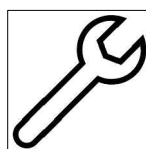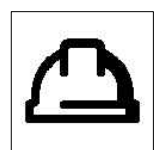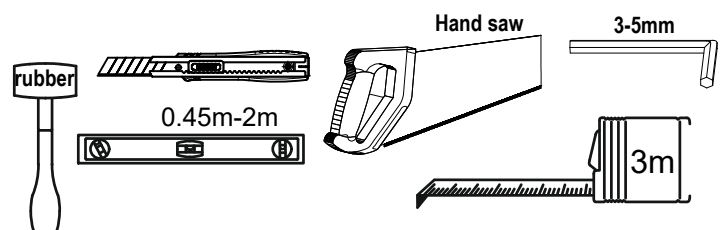


Ø4-10mm

STEP 1: Measure support cradles (A) diagonally from corner to corner. Measurements “a” and “b” should be equal to ensure the cradles are square. Be sure cradles remain level. Place the support cradles (A) on level site. Carefully level for better stability. Place the center stave (B) on wooden dowels embedded in outer support cradles (A). Fix the center stave (B) with 5.0x100 SS(S1). Pre-drill holes before fix staves with screws.

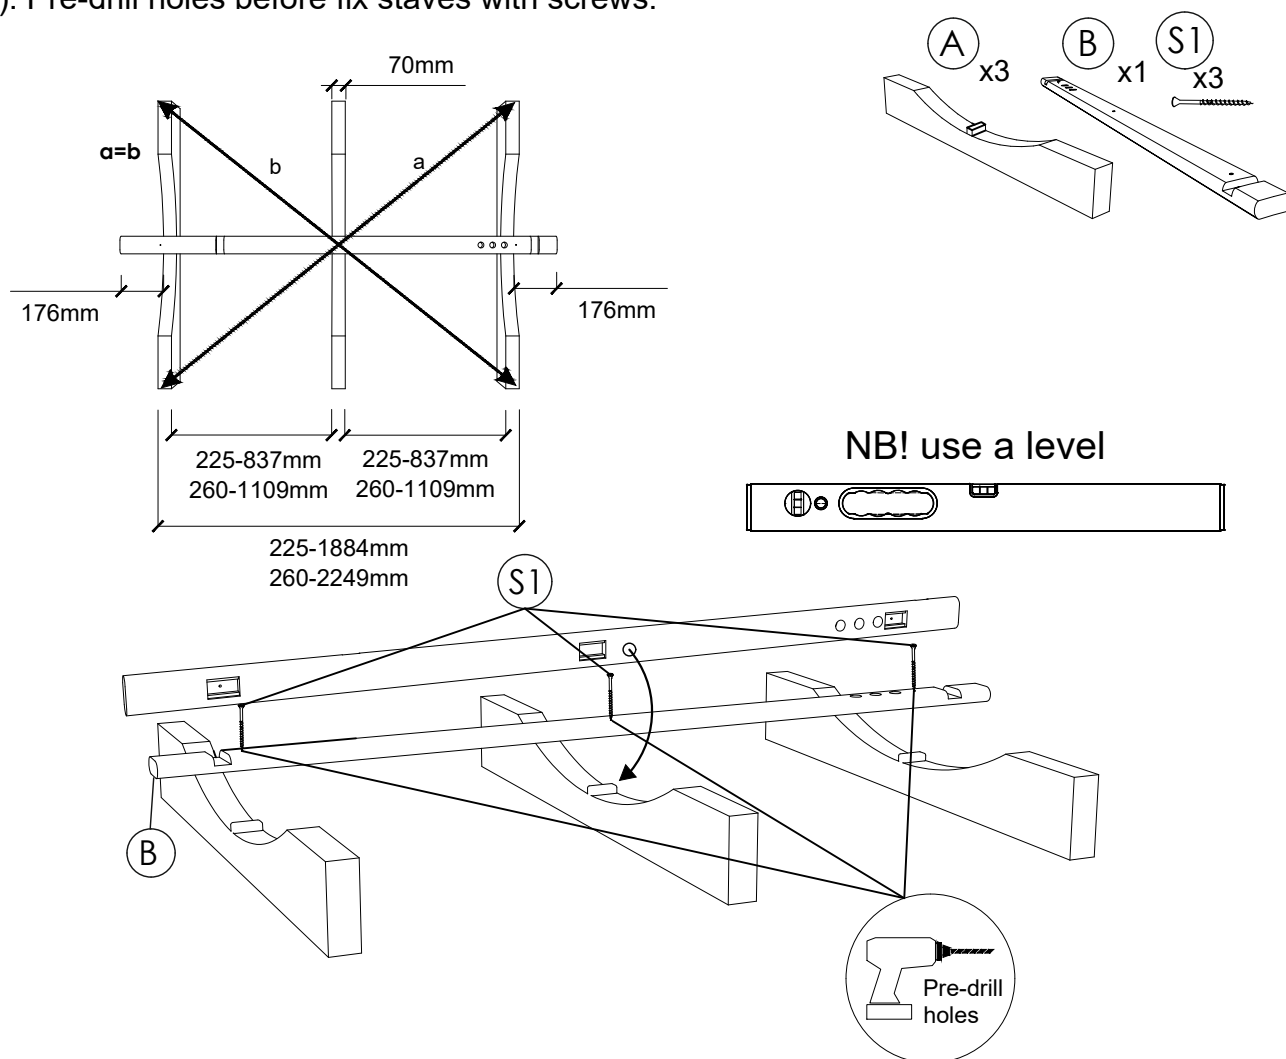


STEP 2: Pre-drill holes before fix staves with screws. Place 6 (R190) or 7 (R225) sauna body staves (C) to each side of the center stave (B) and fix with screws 5.0x100 SS (S1). Be sure to align the panel groove on every next body stave, to do that use rubber hammer.


NB! use a level

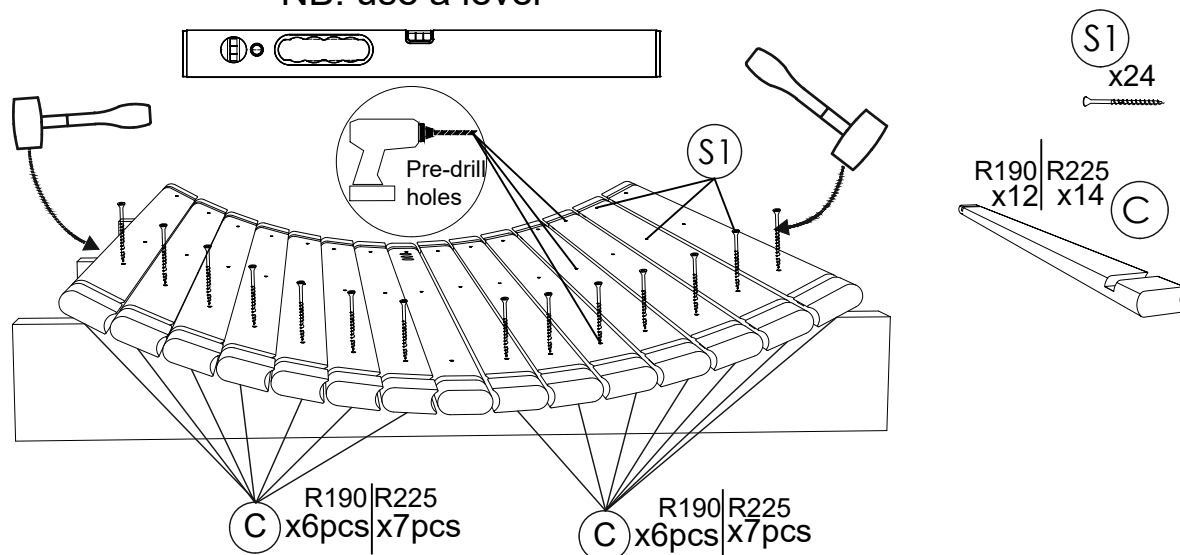


STEP3: Drill six 10mm holes in front and back wall groove to the out-side in board connections as shown in the picture.

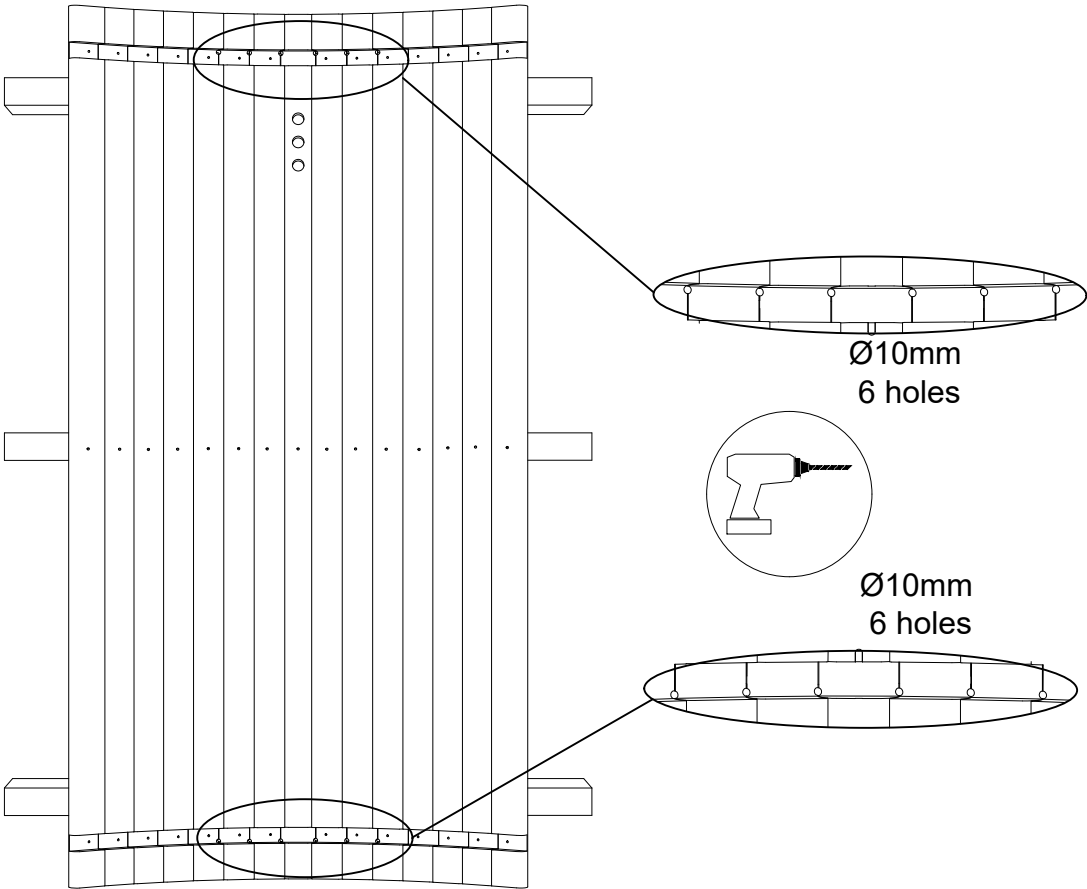


STEP 4: Place front bottom panel (F) in stave groove, be sure panel is centered, leveled, completely seated. Fix panel using 5.0 x 120 (S4) screws through last floor stave on both sides.

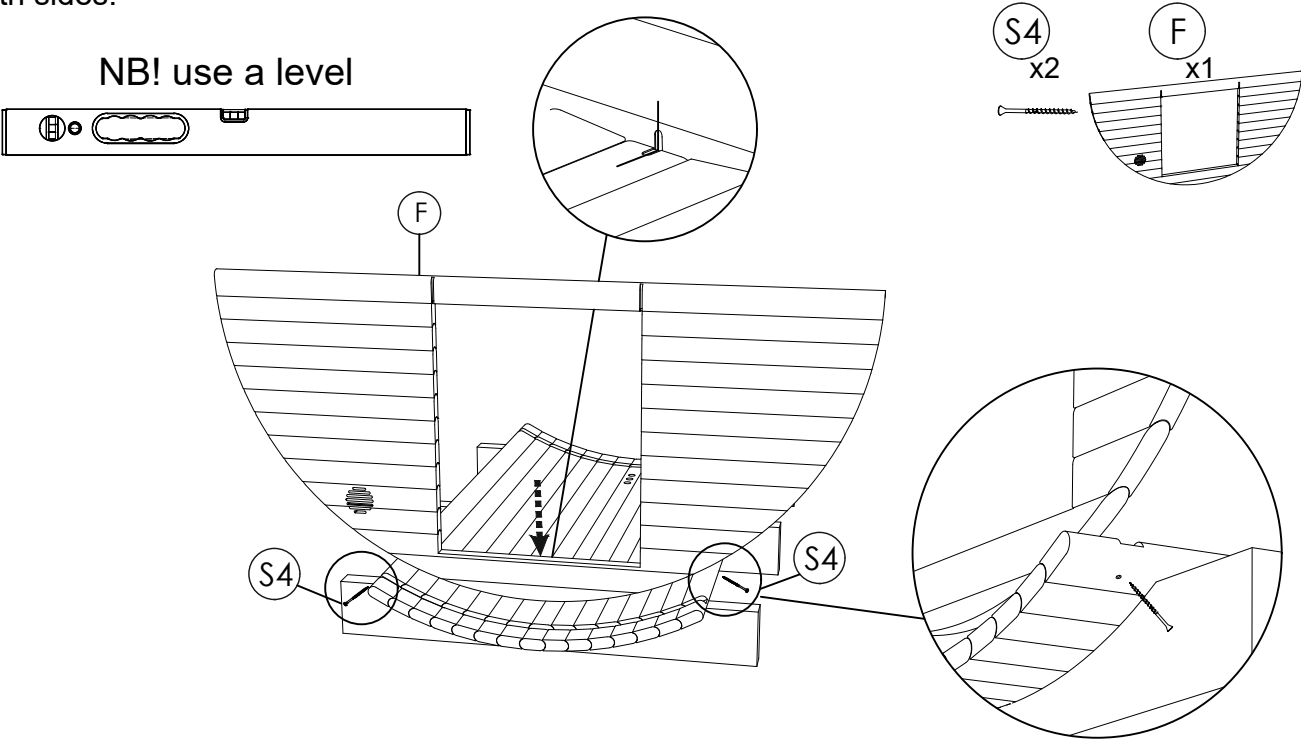


STEP 5: Place rear panel (V) in stave groove, be sure panel is centered, leveled, completely seated. Fix panel using 5.0 x 120 (S4) screws through last floor stave on both sides.

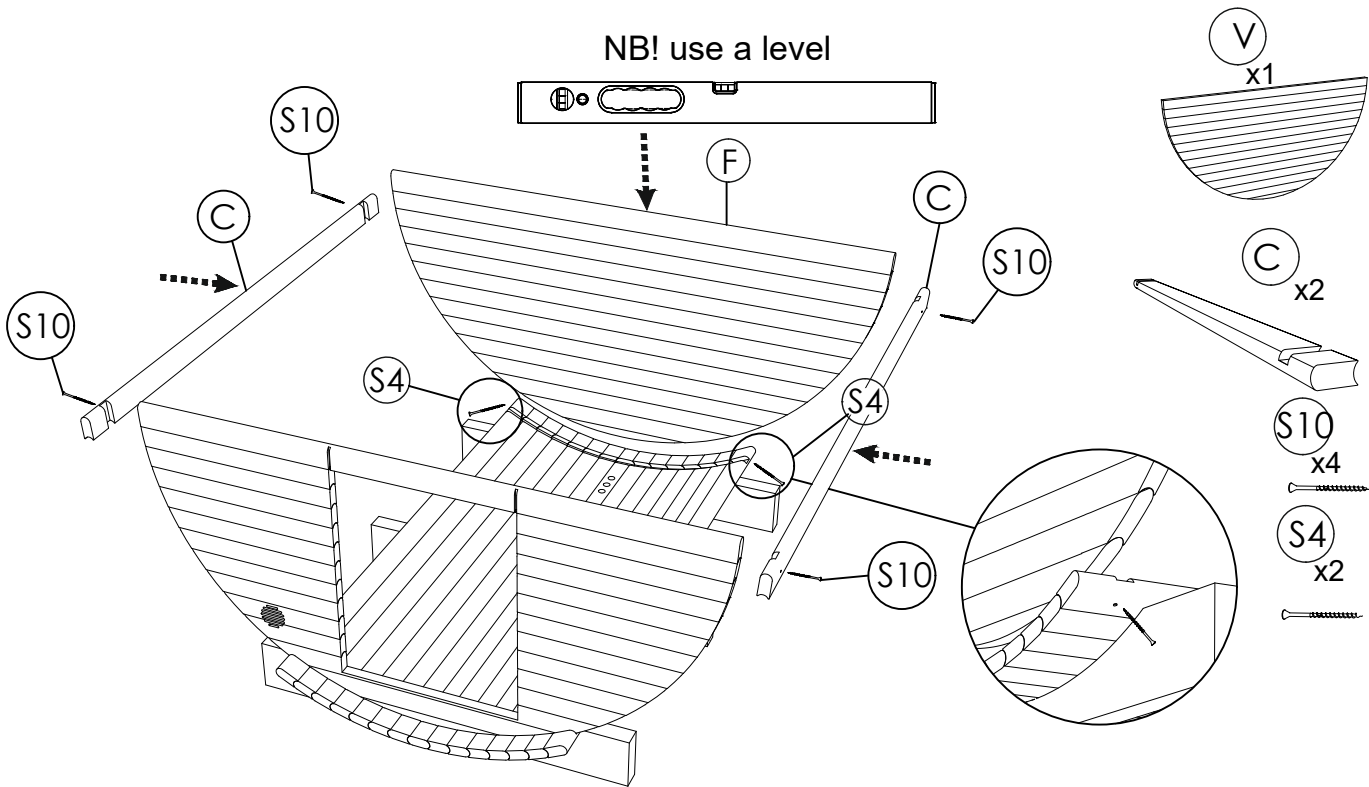


STEP 6: Continue placing body staves (C) tightly on both sides of the sauna using rubber mallet, and fixing body staves with screws 4.0x60(S10) . Fix one stave higher on left side than at right.

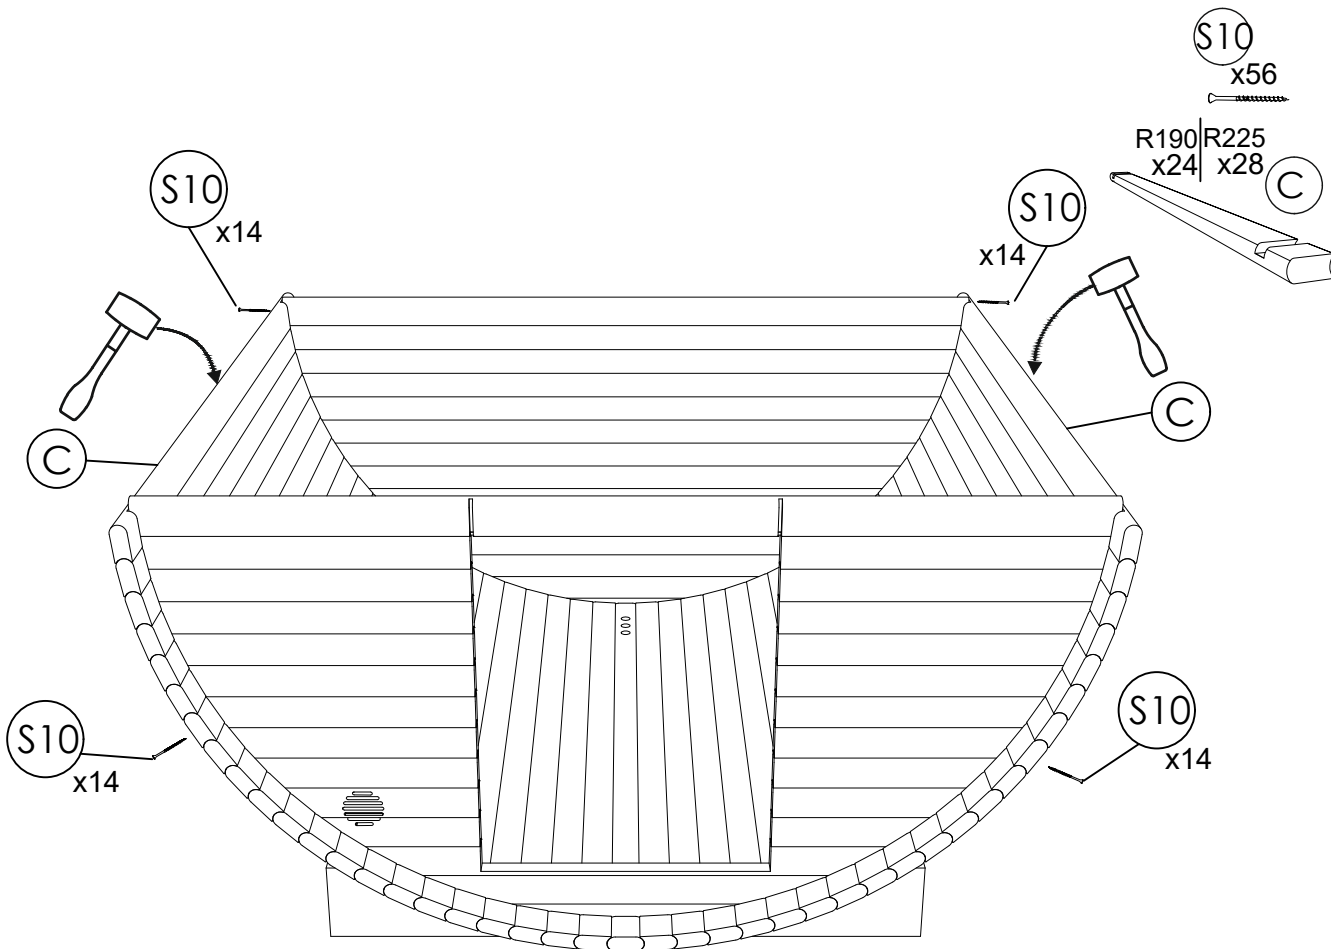


STEP 7: Place front top panel (F1) on front bottom panel (F), be sure panel is centered, leveled, completely seated. Fix panel using 5.0 x 120 (S4) screws on both sides.

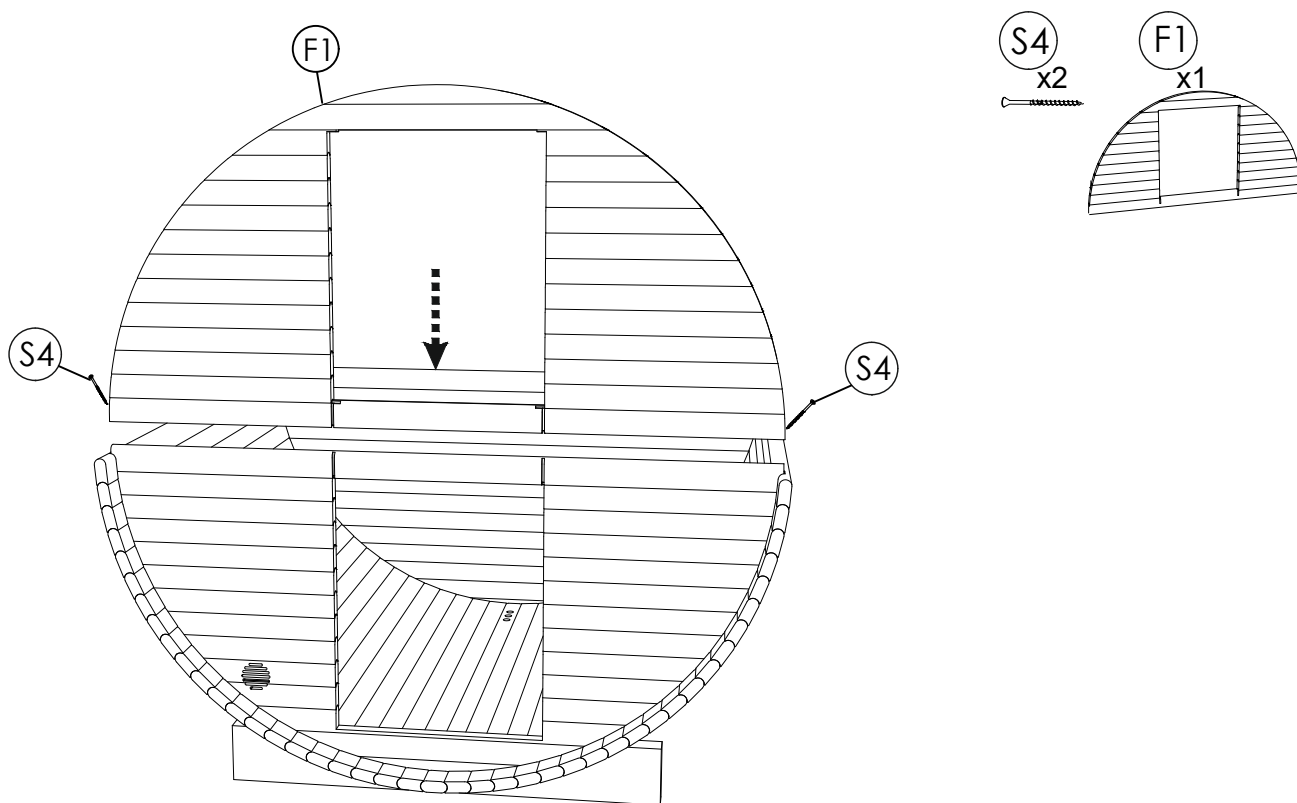

STEP 8: Take the upper rear panel (V3 or V1-panoramic window) and place it on the bottom rear panel (V). Secure it by using 2 screws 5.0 x 120 (S4). Connect the panels (F2; V3) together by placing one body staves (C) both sides where you can reach, with 4.0x60 (S10) screws.

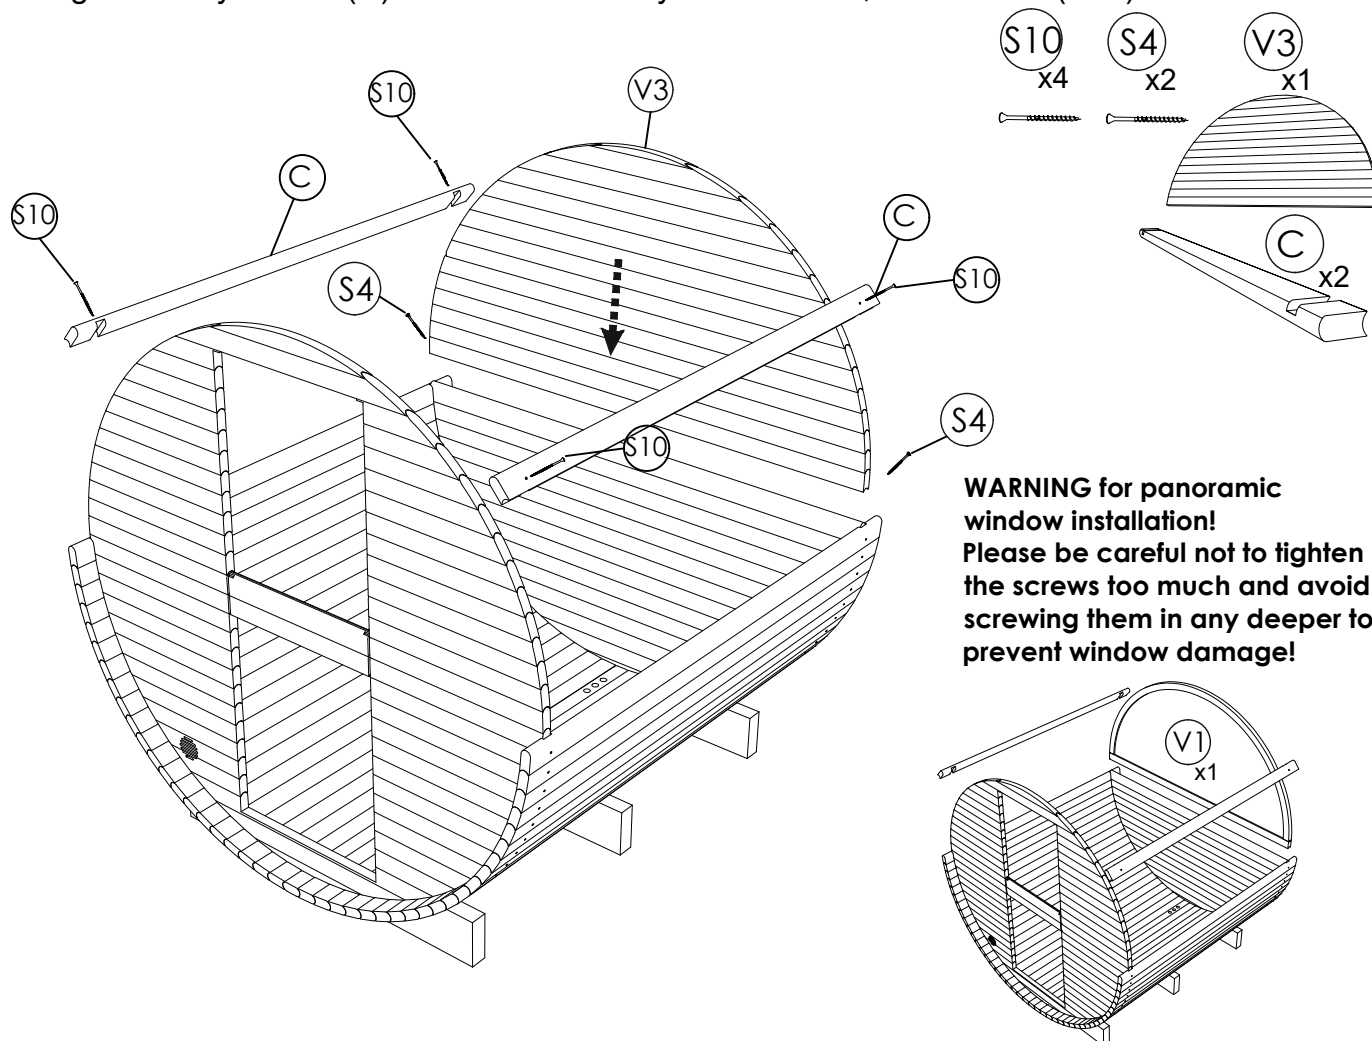

STEP 9: Continue placing body staves (C) tightly on both sides of the sauna using rubber mallet, and fixing body staves with screws 4.0x60(S10).


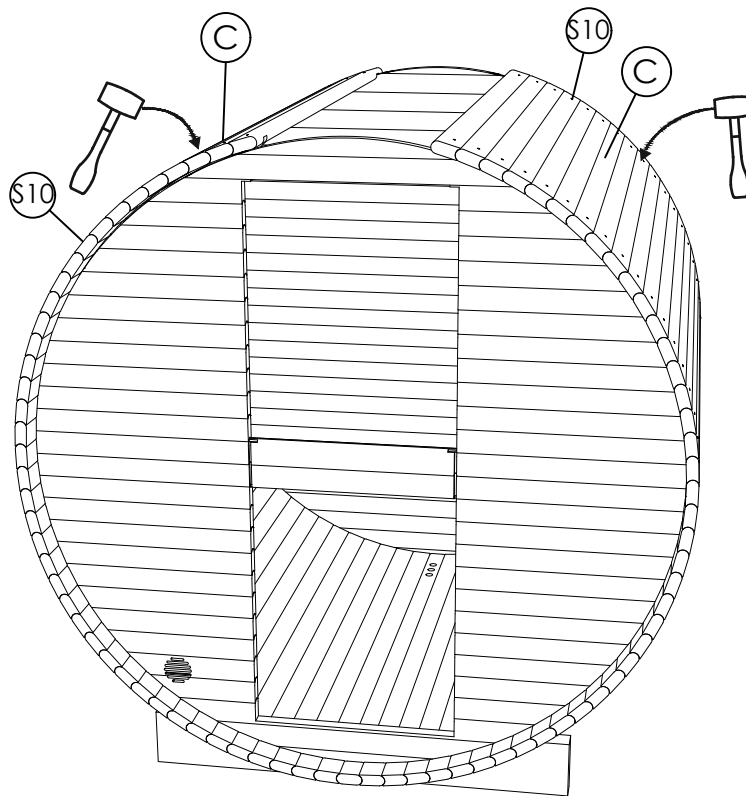


S10
x72

R190/R225
x30/x38

C

STEP 10: To finish the roof top joint, don't screw about last 2-3 boards (C) to each side, use roof finishing item (H). Different thickness filling pieces (H1) are provided to completely fill the gap. Once necessary parts are in, fix last boards with screws.

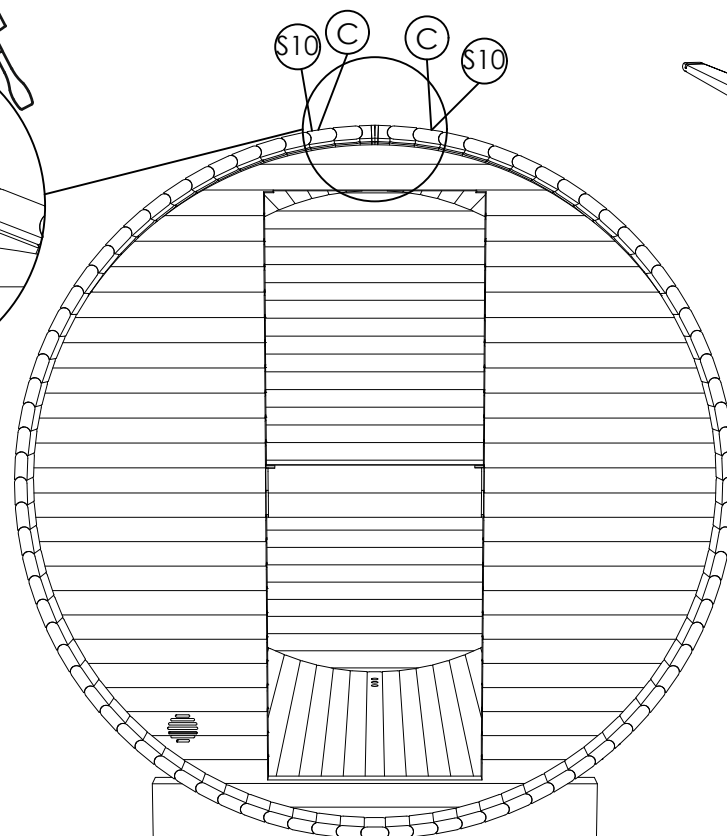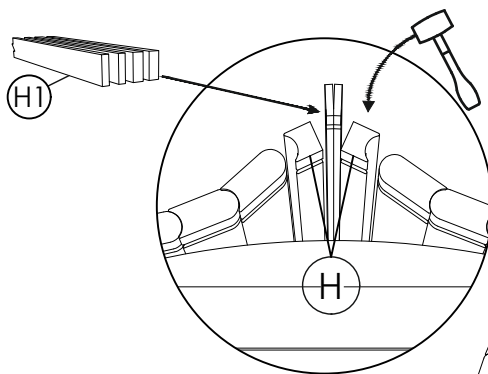


C x4

H x2


H1 x4
10mm 15mm

S10 x12

STEP 11: Install steel bands (I) by wrapping bands around the barrel, then connect with bolts and nuts (S9). Place steel bands evenly around the barrel no more than 3.93in from sauna front and back edges. Bands should cover screw heads evenly. The middle band can be placed either on the right or left side from the centre cradle. The bands should be tense, they cant be loosened.

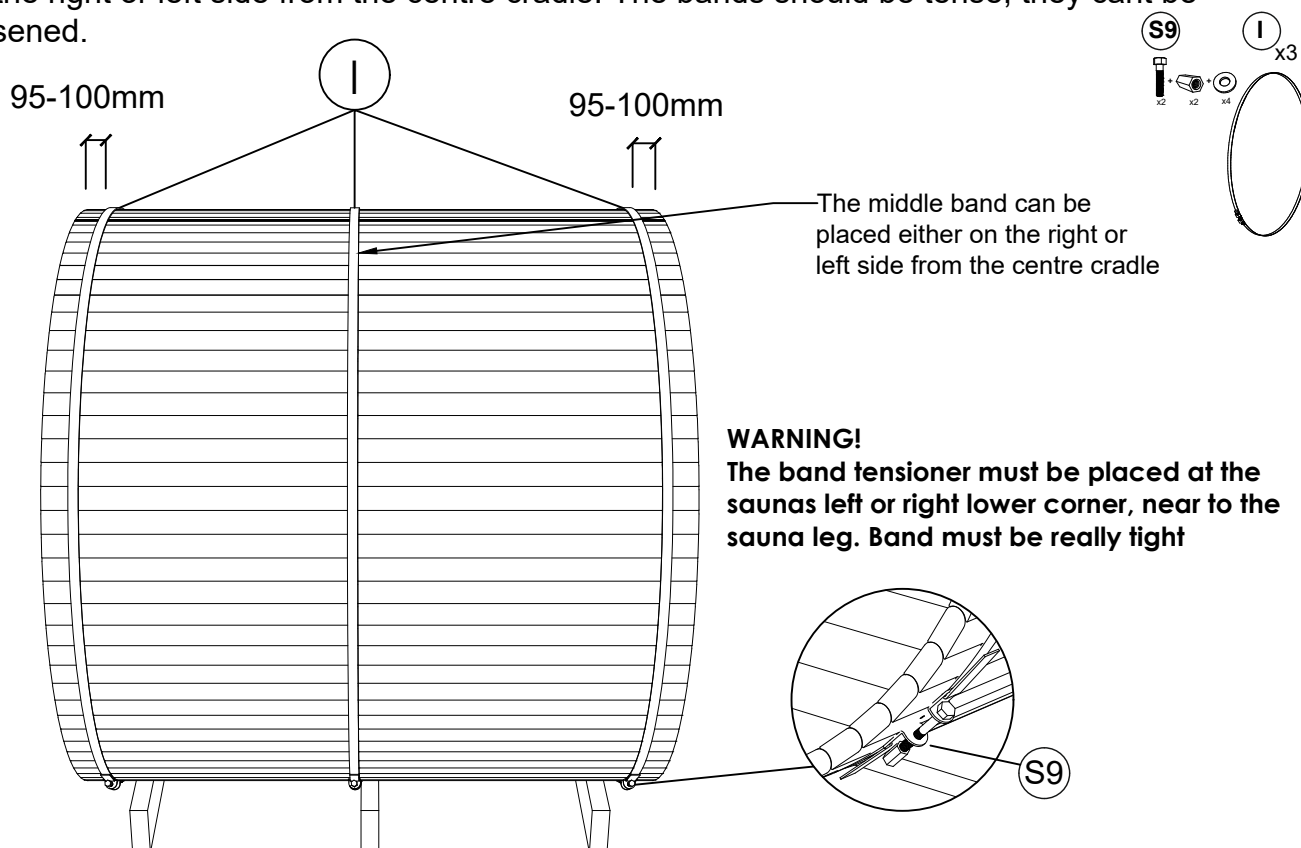


STEP 12: Draw straight line to connect both cuts. Use hand saw or other cutting machine to saw out excess boards for door box. It's recommended to saw out boards from inside. Fix ventilation grill (Y) from inside on ventilation cuts.

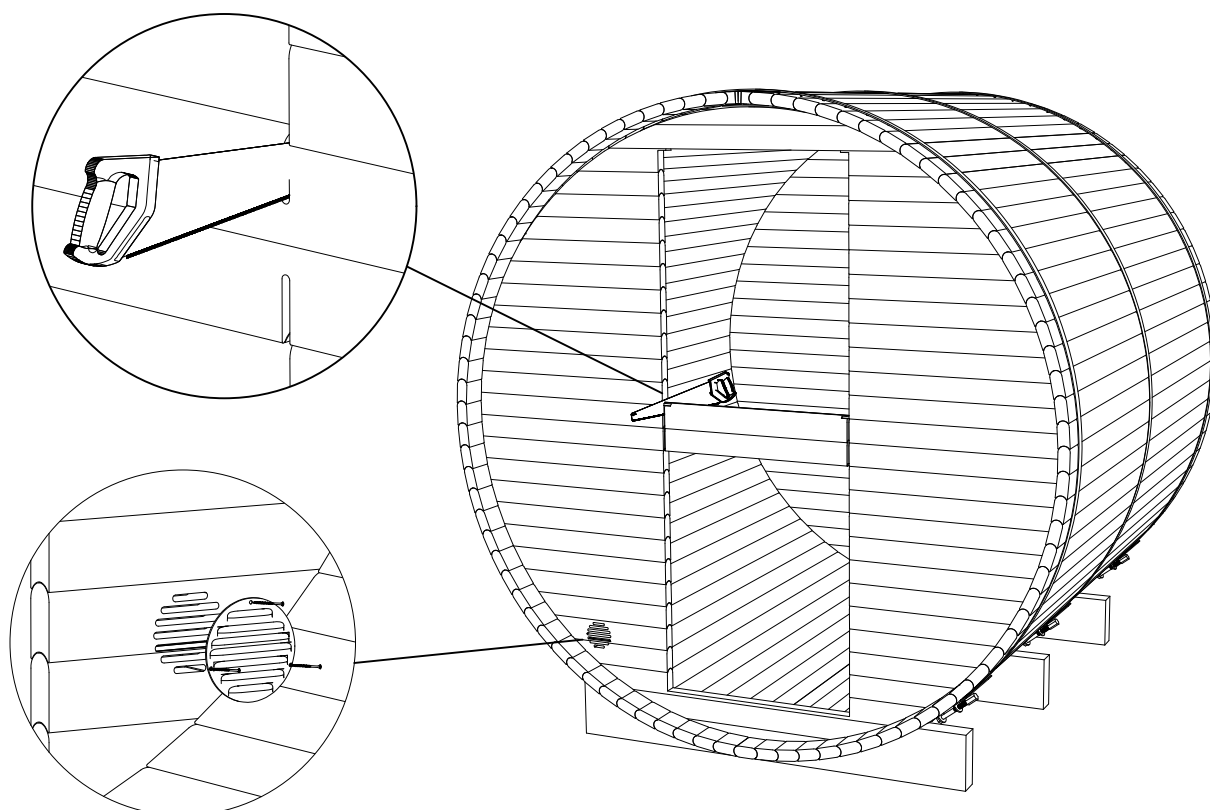


STEP 13: Pre-drill holes for screws. Fix both panels together using 5.0x120 (S4) screws.

(S4)
x2

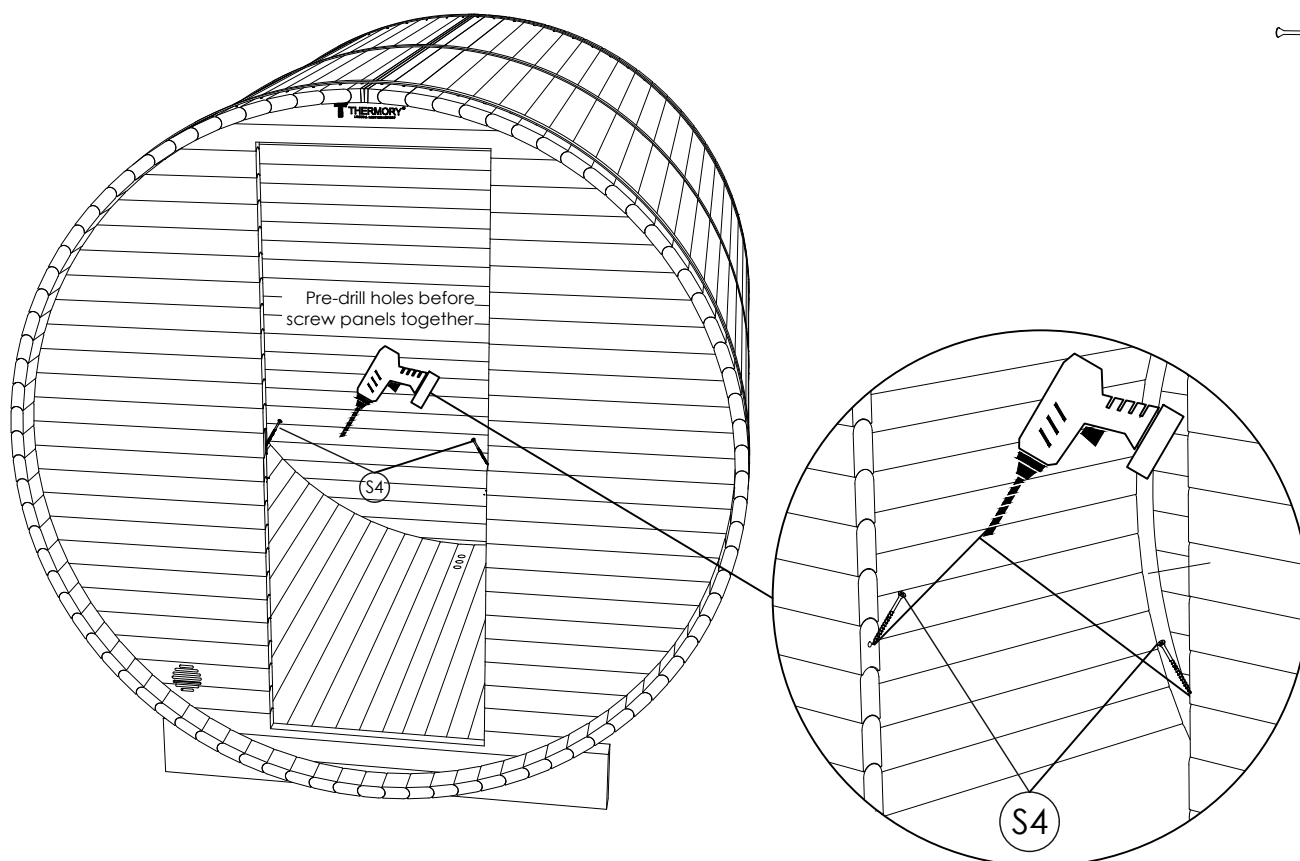


STEP 14: Install the doors (F2). Put the doors on threshold and lay in frame about in the middle. Fix doors with clamps or another person should hold the door.


(F2)
x1

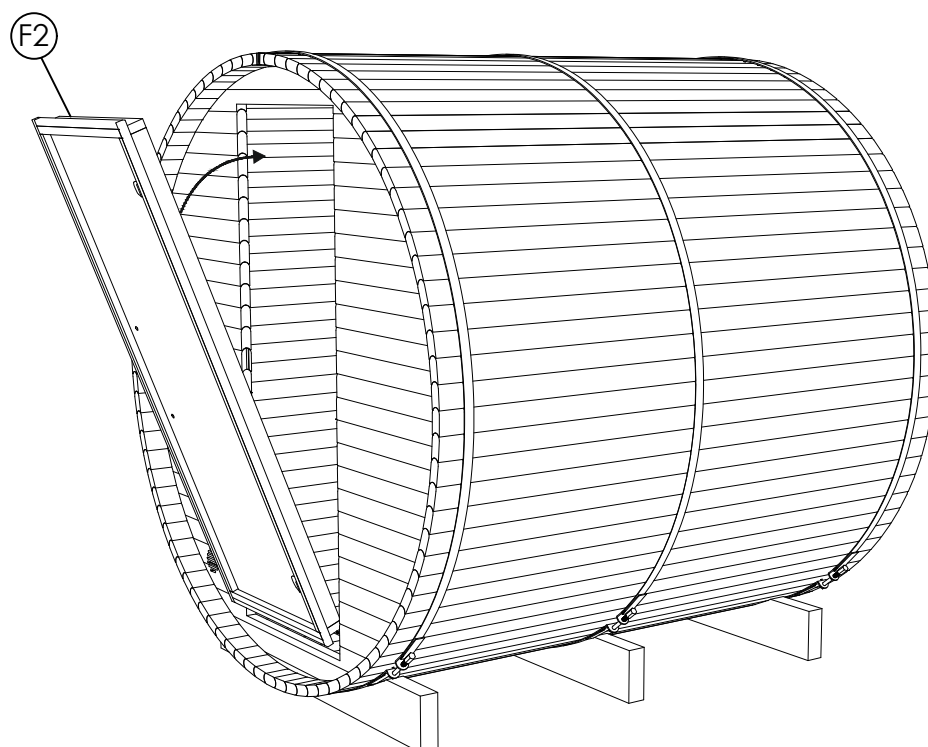


STEP 15: Put plastic spacers in the gap between the door box and the front panel where the screws go. Combine spacers for best width. First, fix one side of the door box with screws 5x80 (S14) through spacers. Then put spacers in other side. Combine spacers for necessary width. Spacers must fit tightly, they can't slip down before door is fixed with screws. Use screws 5x80 (S14) to fix doors. Check door box, both sides should be straight, they must not be bent inwards or outwards. Use foam around door box. Don't clean up the foam until it's dried out. The excess amount will come off easily if you don't touch it while it's wet.

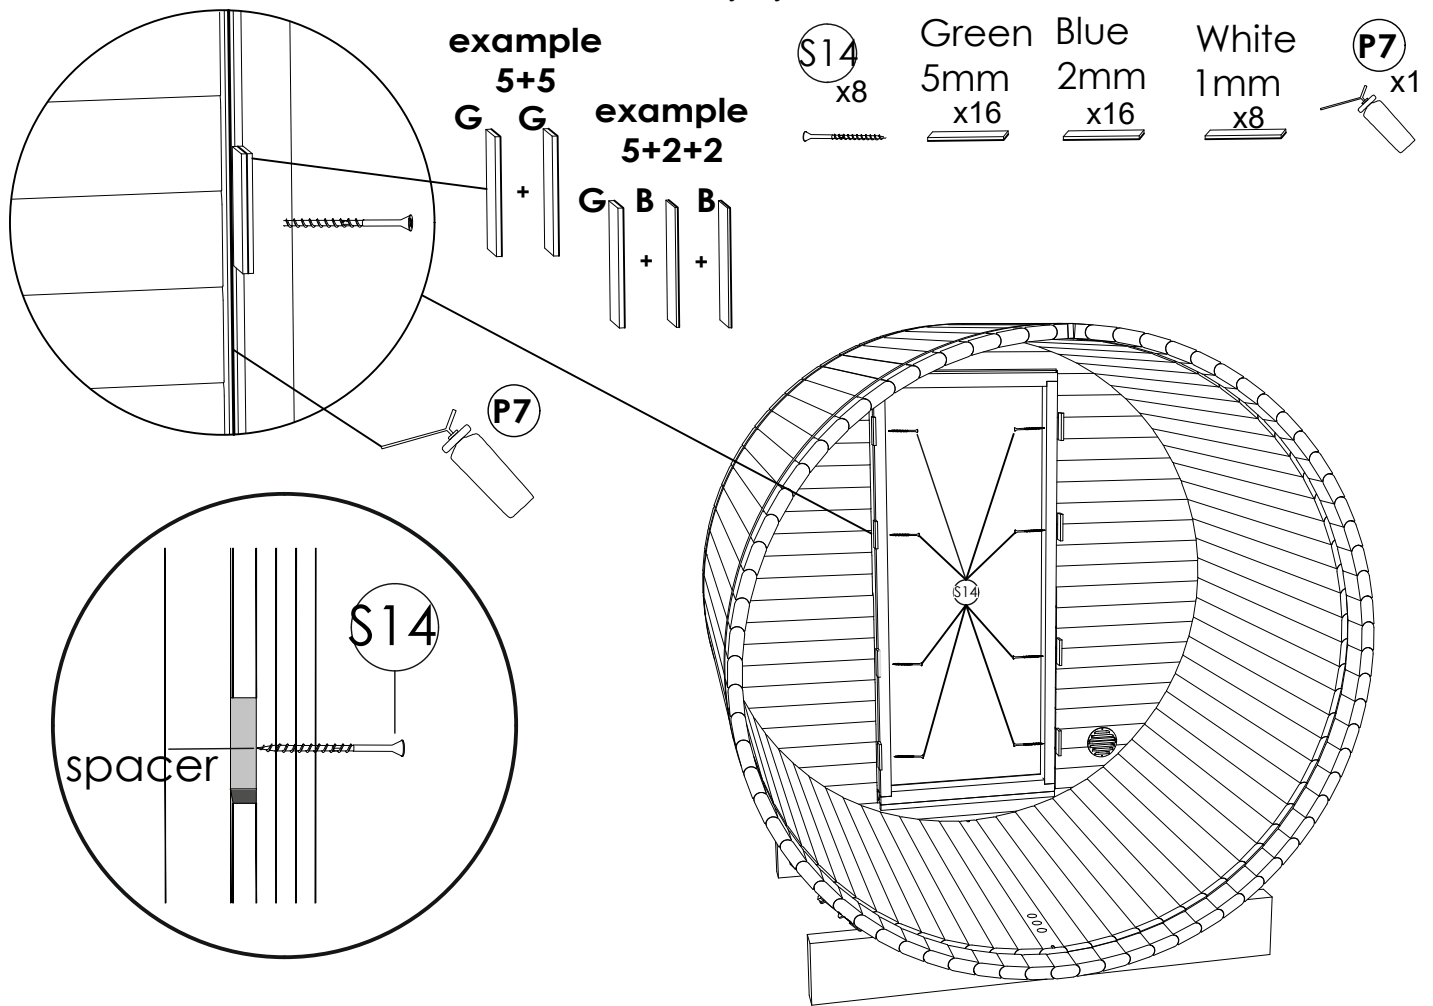


STEP 16: Fix door moldings to both sides and on top of the door with S5 screws 4x50ss.

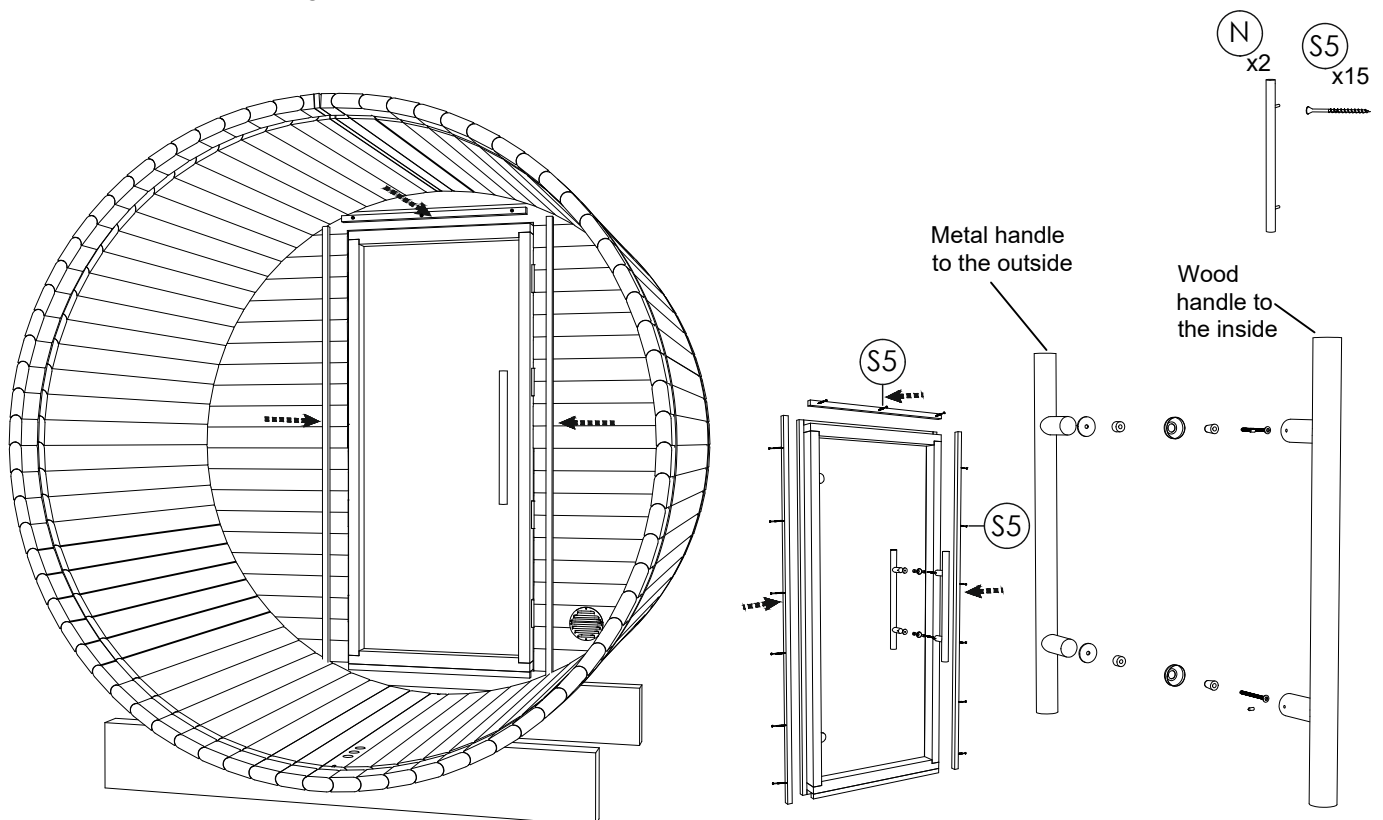


STEP 17: To install wall mounts (J3) use interior supporting leg (J1). Put it on the sauna wall in level, mark a line where wall mounts will stand. Using screw 5.0x70 SS (S6) fix wall mounts (J3) on the marked lines. Install interior supporting leg (J1) in the center of bench (J). Stand bench on side wall mounts. Place J1 in the center and check the level. Using screw 5.0 x 70 SS (S6) fix bench leg to the wall and floor.

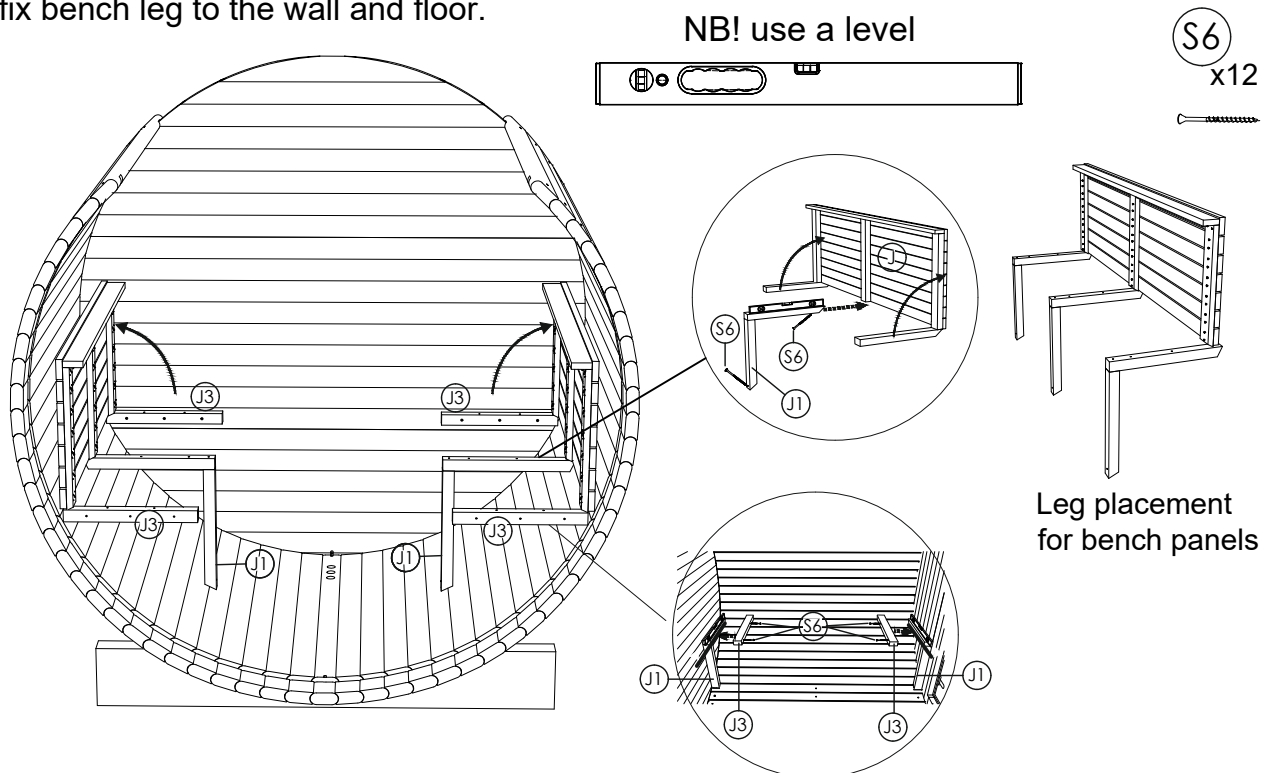


STEP 18: Pre-drill holes before fix backrest with screws, install backrests (J2) using screw 4.0 x 70 SS (S2). Fix sauna bench (J) to wall mounts and support leg using 5 x70 SS (S6) screws. Fix bench panel(if ordered) with screws 4.0x50SS (S5).

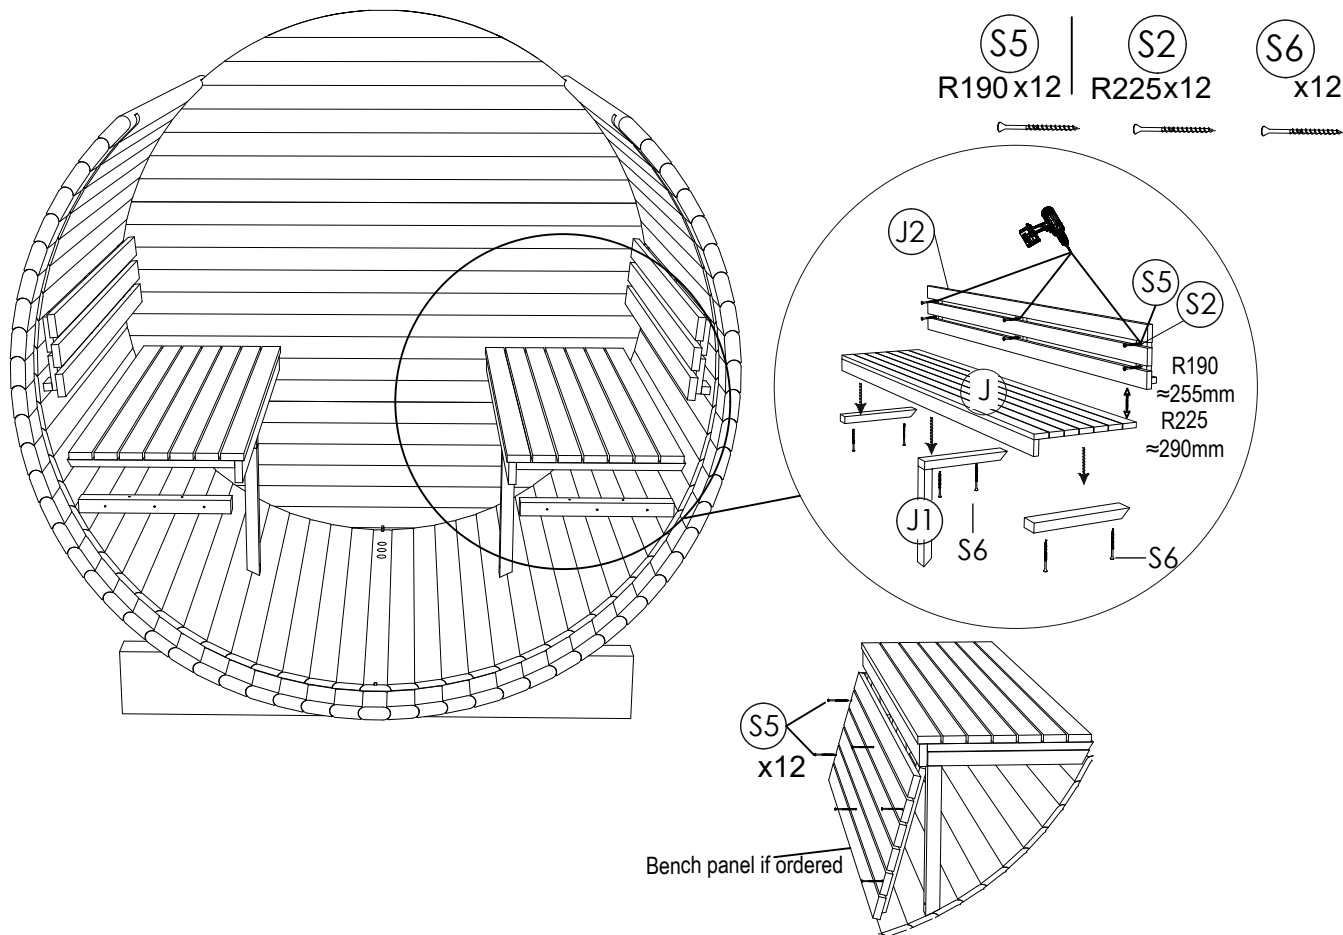


STEP 19: Place floor duckboards (L) to the both sides upwards and place fixing blocks next to the flooring cross boards. Pre-drill holes before fix with screws, install fixing blocks (L1) using screw 4.0 x 70 SS (S2)R190 or 4x50SS (S5)R225.

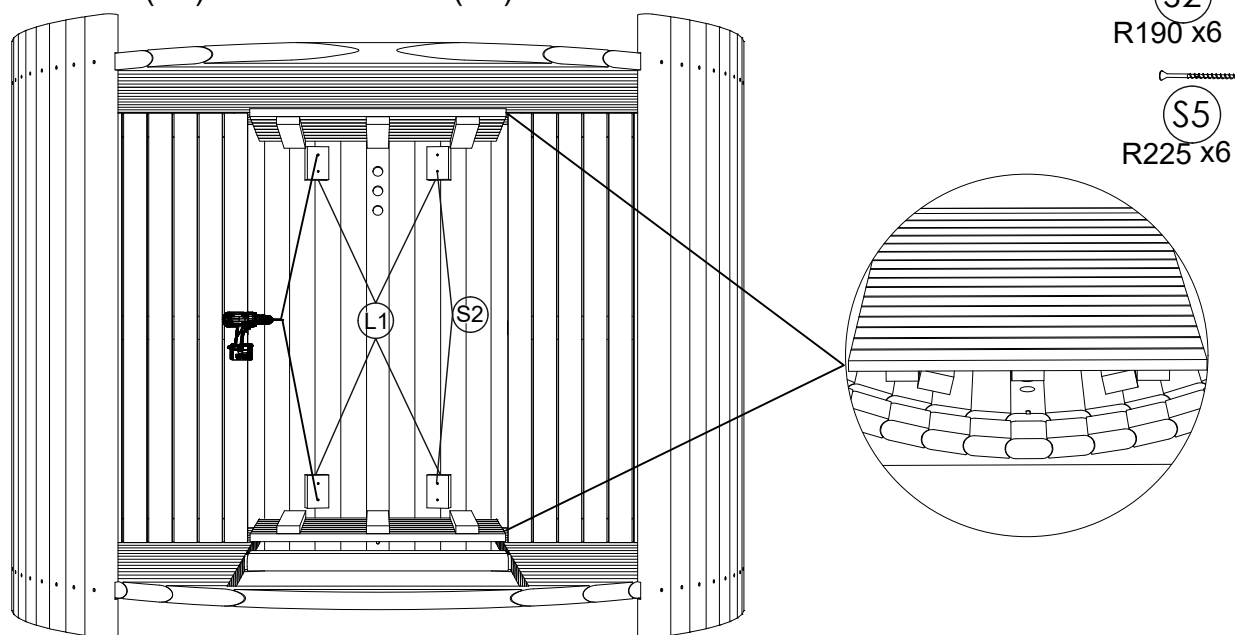

STEP 20: Pre-drill holes before fix with screws, install fixing blocks (L1) under floor duckboard using screw 4.0 x 70 SS (S2) R190 or 4x50SS (S5) R225. Place floor duckboards (L) on the floor and fix fixing blocks next to both flooring crossboards.

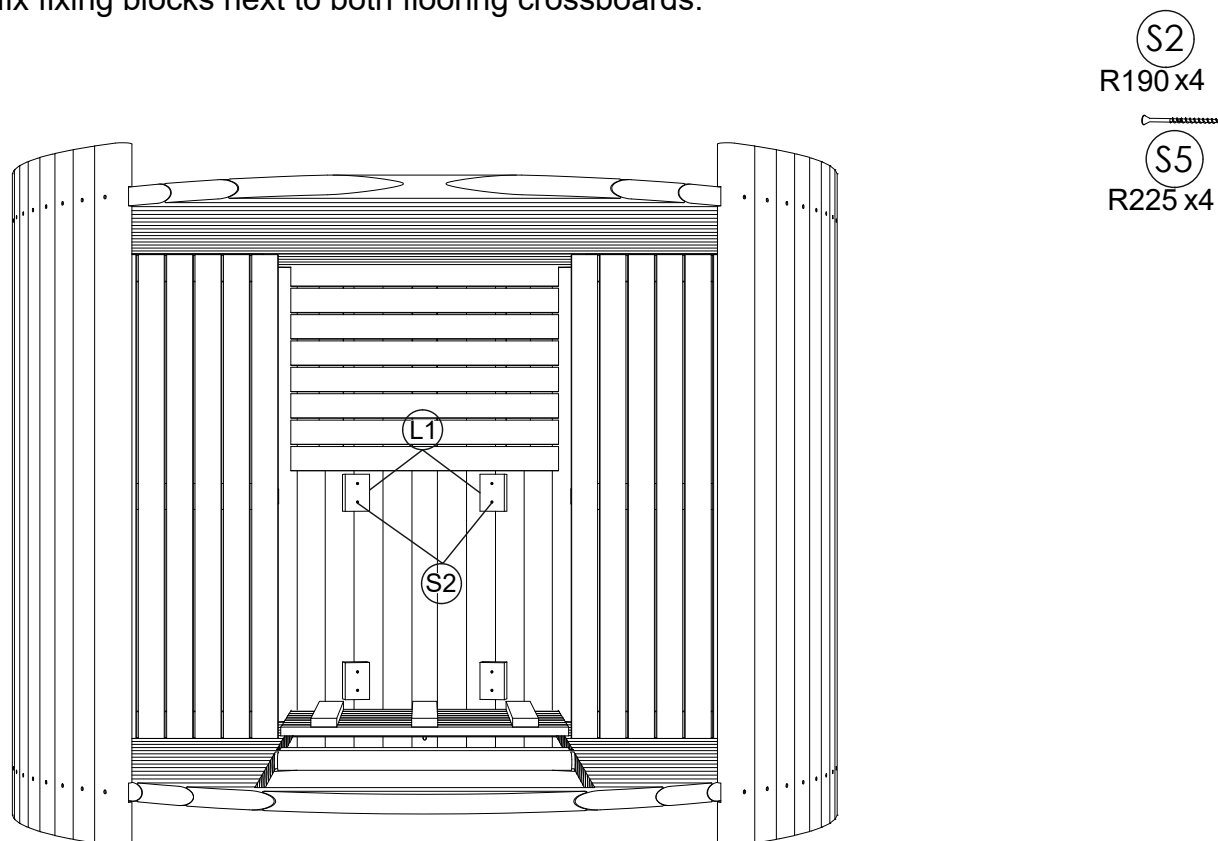

STEP 21: Pre-drill holes before fix stave with screws, install interior roof trim (O) in sauna with 4.0 x 50 SS (S5) screws.

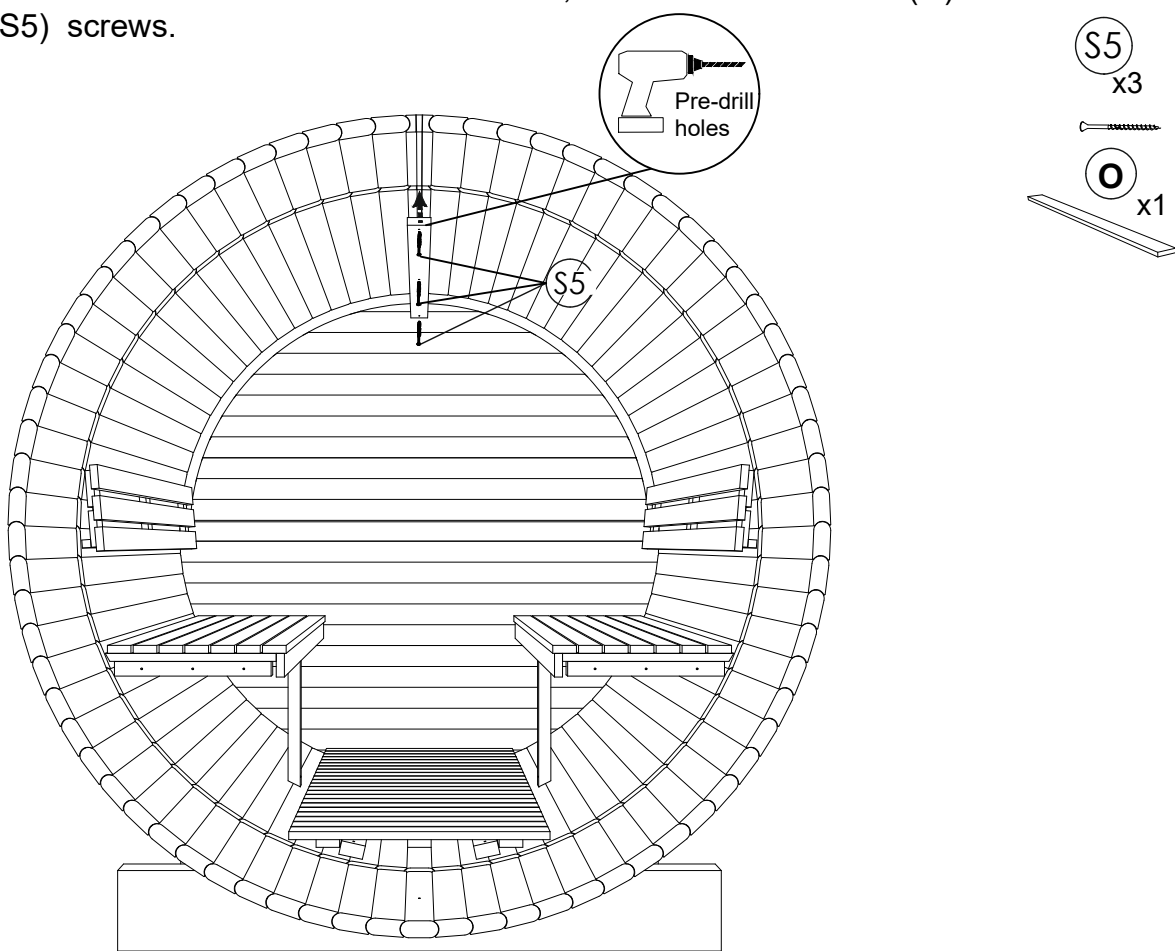

STEP 24: For shingles installation see additional manual.

